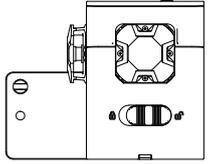
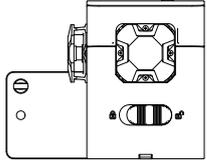
 
 



Parts List

<p>Left Two-line Laser 1 PC</p>		<p>Right Two-line Laser 1 PC</p>	
<p>Left Extension Rod 1 PC</p>		<p>Right Extension Rod 1 PC</p>	

Assemble the Two-line Lasers on the Sliding Plates

1


Open the battery cover at the bottom of the left two-line laser and insert four AA batteries (not included). Stand in front of the calibration frame. Attach the mounting surface of the two-line laser to the groove on the left sliding plate to secure it in place.

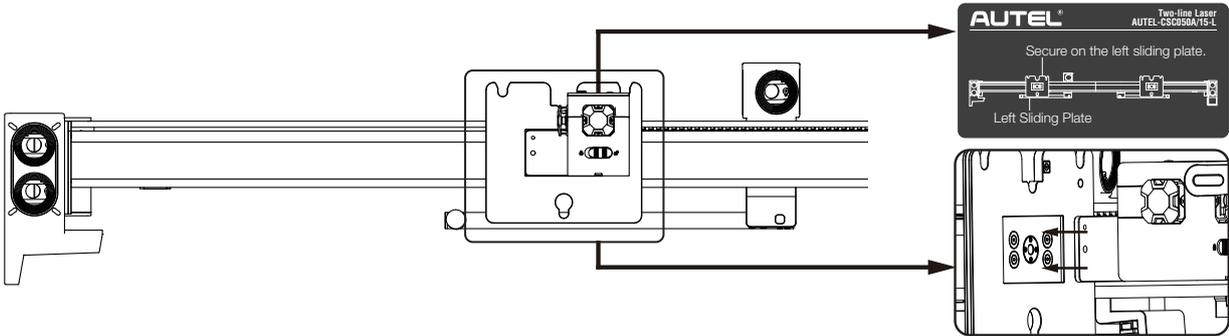

2


Slide the front switch on the two-line laser to the right. The two indicator lights on top will turn on, which will display different colors in different working states. The meaning of each indicator light is as follow:

- Left Indicator Light:
 - Red: Bluetooth not connected;
 - Blue: Bluetooth connected;
- Right indicator light:
 - Green: Two-line laser operating normally;
 - Red: Low battery.

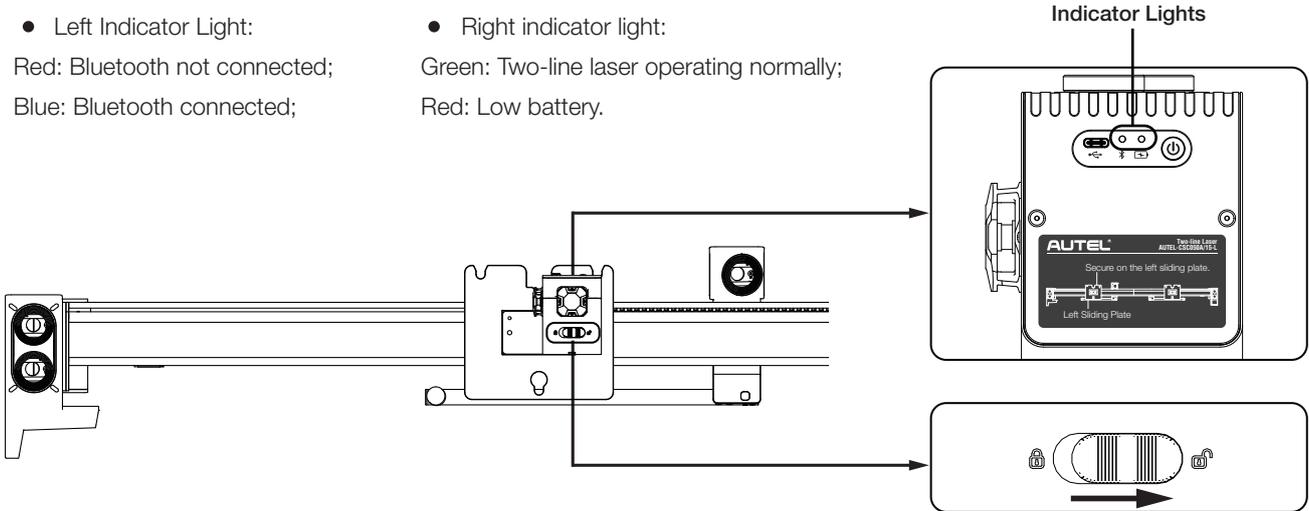


3

Check if the two-line laser is working properly: When the two-line laser is on, press the top button to activate or deactivate the laser. Hold the button for 4 seconds to put the laser into standby mode. If activated, the laser will automatically stop emitting after 5 minutes and enter standby mode after 10 minutes.

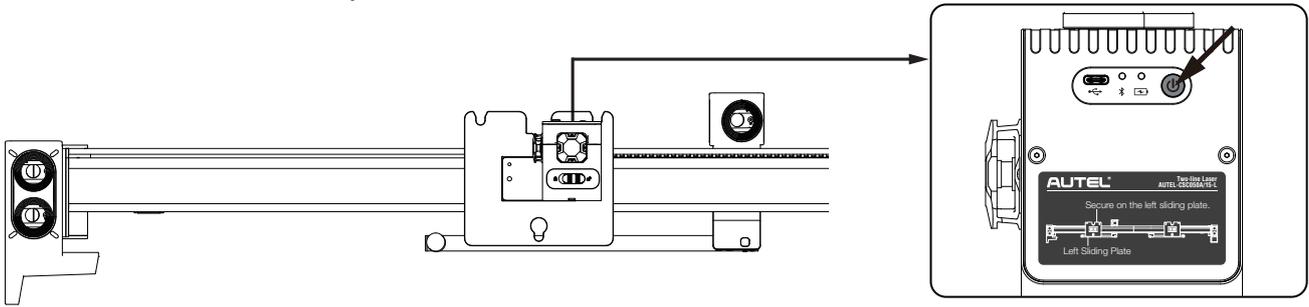

4


Install the right two-line laser onto the right sliding plate using the same method as for the left two-line laser.

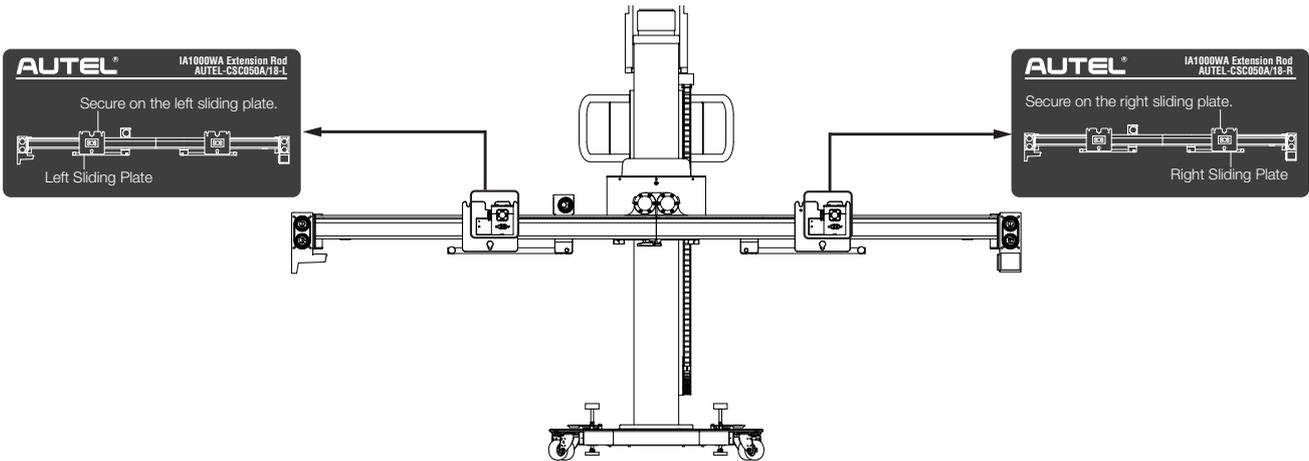

Assemble the Extension Rods and the Two-line Lasers on the Sliding Plates


1

Stand in the front of the calibration frame. Align the positioning spaces of the left extension rod with the grooves on the left sliding plate.

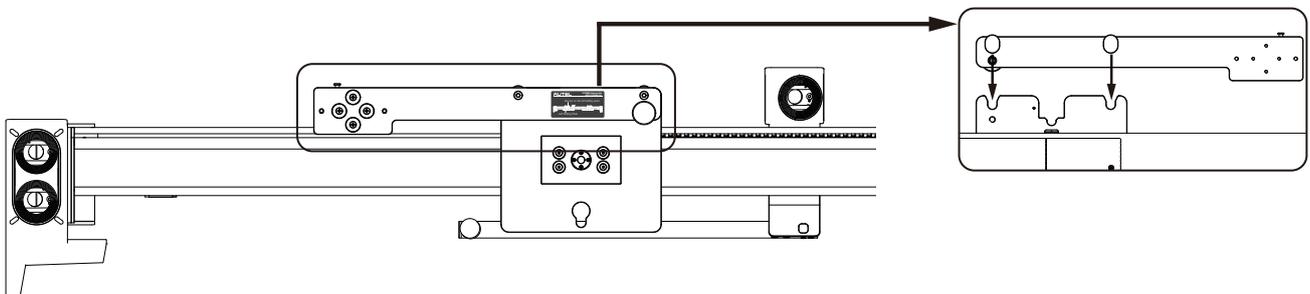


2

Tighten the fastening knob on the extension rod securely.

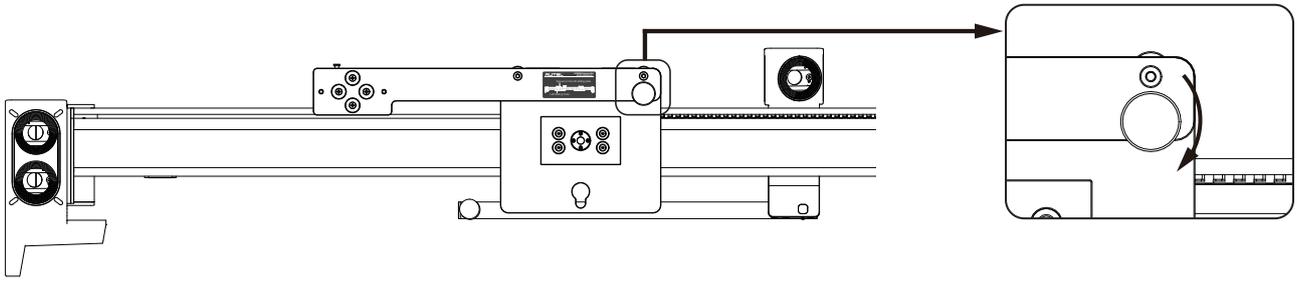

3


Open the battery cover at the bottom of the left two-line laser and insert four AA batteries (not included). Attach the mounting surface of the laser to the groove on the left extension rod to secure it in place.

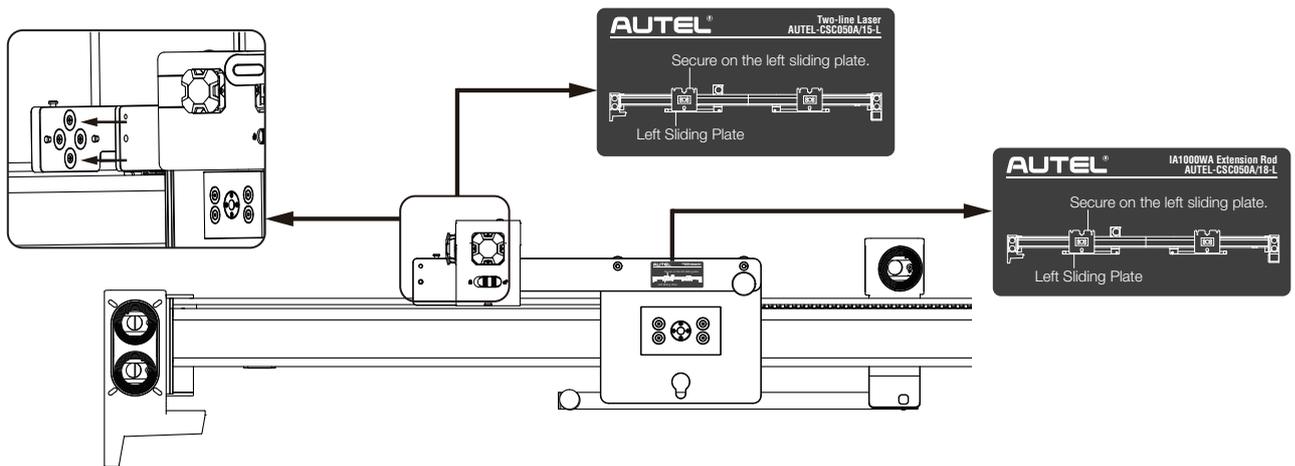

4


Slide the front switch on the two-line laser to the right. The two indicator lights on top will turn on, which will display different colors in different working states. The meaning of each indicator light is as follow:

- Left Indicator Light:
 - Red: Bluetooth not connected;
 - Blue: Bluetooth connected;
- Right indicator light:
 - Green: Two-line laser operating normally;
 - Red: Low battery.

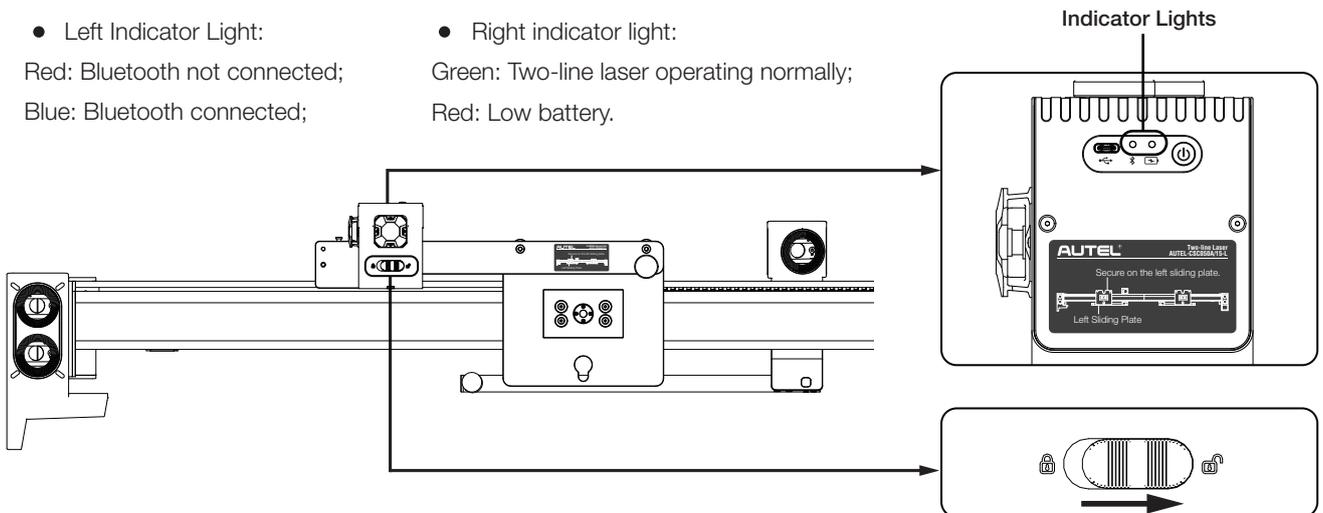


5

Check if the two-line laser is working properly: When the two-line laser is on, press the top button to activate or deactivate the laser. Hold the button for 4 seconds to put the laser into standby mode. If activated, the laser will automatically stop emitting after 5 minutes and enter standby mode after 10 minutes.

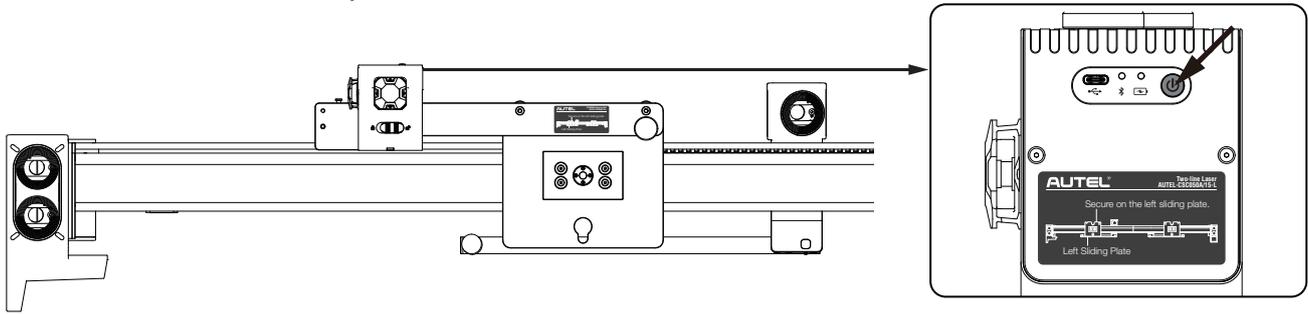

6

Install the right two-line laser and extension rod onto the right sliding plate using the same method as for the left two-line laser and extension rod.

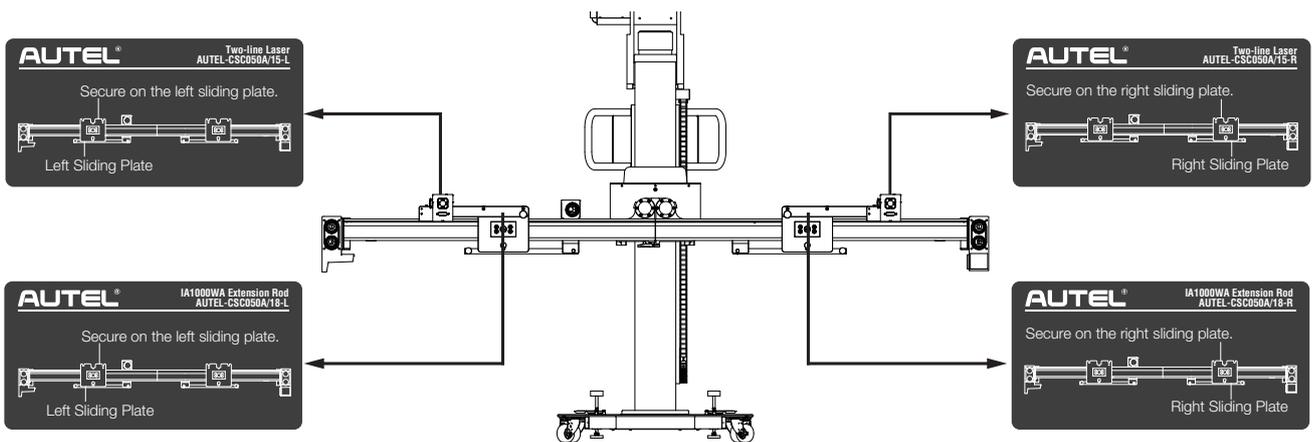

NOTE: The illustrations in this Quick Reference Guide are for reference only. The actual product may differ.